



Instructions For Changing Discs

- 1) To change discs, remove disc retaining screws and caps.
- 2) Remove old discs.
- 3) Wipe both sides of the new discs clean on a pad of paper, old catalog or phone book.
There can be no foreign material between the discs or they will be damaged.
- 4) The new discs are inserted on the machine as illustrated above.
Start by placing a disc on the lower shaft first and then alternate between top and bottom shaft.
- 5) Replace disc-retaining screws and caps. Lightly tighten screws.
- 6) For variable conductor spacing, loosen disc-retaining screws so that discs are slightly loose