


Adjusting & Using the SL-3 Slitz-It

1. Loosen one of the two blade screws on the side slightly.(Sometimes you have to loosen both screws if the adjustment is unusually large.)



2. Insert the cable you wish to slit into the tool and butt it up against the blade.
3. Squeeze the tool together onto the cable with just enough pressure to hold the cable but allow it to slide back and forth.

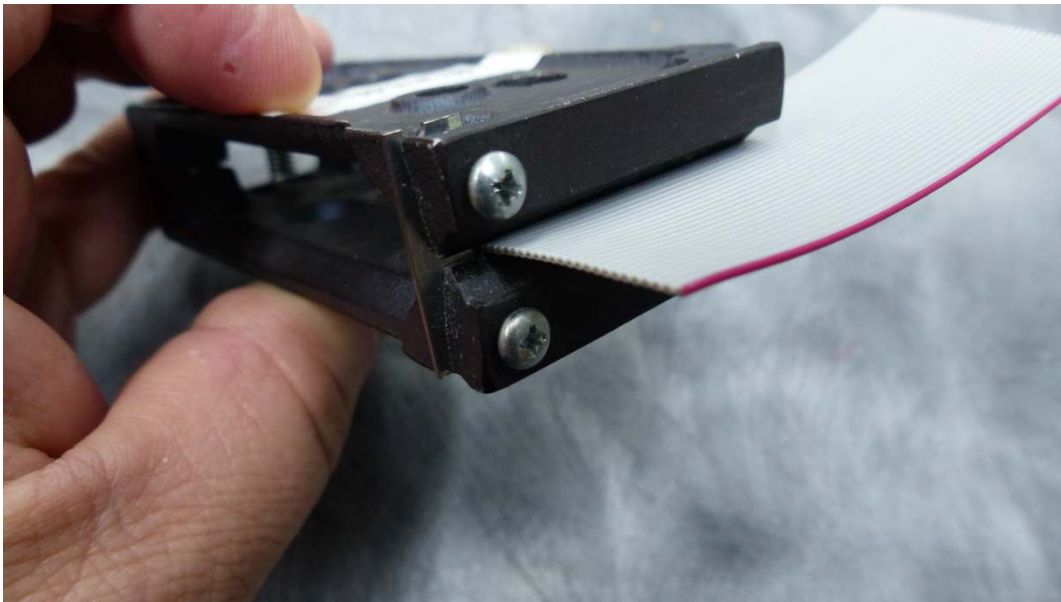

4. Tighten the blade screw. Be careful not to over-tighten it. You can break the casting.
5. The cable should slide into the tool with a slight amount of force but should not bind.

6. Pull the cable straight through to separate.

